



**CROSSWORD  
SOLVER  
CS-1000**

## GETTING STARTED

---

Your crossword solver is supplied with a lithium battery and is therefore ready for use.

1. Press **[ON/OFF]**

A demonstration appears giving a brief description of the crossword solver's features.

2. Press **[CLEAR]**

This will stop the demonstration and the crossword solver will be ready for use.

Press **[▲]** or **[▼]** to adjust the screen contrast

**Note:** The contrast can only be adjusted when "READY" is displayed.

## DISABLING THE DEMONSTRATION

---

The demonstration appears each time the crossword solver is switched on. To disable the demonstration, press **[CLEAR]**, type " \_ \_ d" and press **[ENTER]**. To enable the demonstration type " \_ \_ d" again.

## HELP

---

Pressing **[HELP]** will provide the user with an explanation of the current mode or give instructions on what to do next. To exit the help mode press **[CLEAR]**

## AUTO-SHUTOFF

---

The crossword solver will automatically shut off if not used for two minutes. If the demonstration function is disabled, the crossword solver will resume its last function when it is switched back on.

## FINDING WORDS

---

The crossword solver helps you to find answers to crosswords by finding missing letters. By typing in a word replacing the unknown letters with a "?" the crossword solver will find all possible matches from its word list.

### EXAMPLE:

1. Type a word inserting a "?" for each unknown letter.

conc??ve

To delete a letter, press [BACK] or [◀]

To type a space, press [▶]

2. Press [ENTER]

conceive

↓

will be displayed

3. Press [▼] to view more matching words.
4. Press [CLEAR]

**Note:** A "?" can also stand for a space between words.

 
## FINDING MORE WORDS

---

If the word you are looking for does not appear on the matchmaker list, press **[MORE]** to find more possibilities. The crosswords solver will substitute a letter for one which you have typed to come up with more alternatives.


### EXAMPLE:

1. Type :



"Correct word" appears which means the word was spelt correctly.

 2. Press **[MORE]**



The new letter is displayed in lowercase

3. Pressing **|▼|** will display further variations such as cab, can, cap etc.
4. Press **[CLEAR]**


## FINDING PHRASES

---

Use your crossword solver to find phrases that include a key word.

 
### EXAMPLE:

1. Type in a key word



CAT

2. Press [**PHRASE**]



BLACK-CAT ▼

3. Press [▼] to view more phrases
4. Press [**CLEAR**]


## TOPIC SEARCH

 ---

It is possible to narrow your search by choosing a topic category before typing in your word. There are 196 topics from Academics to Zoology.

### EXAMPLE:

1. Press **[TOPICS]**



The first topic in the list will appear on the screen.

2. Scroll through the list of topics by pressing **[▼]** or by pressing the first letter of a topic e.g., "E" for Education.
3. Select your chosen topic by pressing **[ENTER]**
4. Type a word inserting a "?" for each unknown letter.
5. Press **[ENTER]**. The display will show you matching words in your chosen topic.
6. If the crossword solver cannot find a matching word "Sorry can't help" will be displayed

### Alternatively:

1. Choose your topic as shown above.
2. Type a "?" for each letter of the unknown word. For example, type "?????" for a four letter word.
3. A list of four letter words will be displayed for your chosen category.
4. Press **[▼]** to scroll through the list.

## QUIZ GAME

---

The crossword solver has a quiz game with three skill levels to help you to improve your crossword puzzle solving skills. The aim is to guess the missing letters of a mystery word from a topic selected at random.

1. Press [QUIZ]
2. Press [▼] to view the skill levels
3. Press [ENTER] to select the skill level displayed

 
**Note:** The skill level changes the number of missing letters. The harder the level, the more letters you must guess.

4. The topic of the mystery word will be displayed briefly.

### EXAMPLE:



followed by the mystery word



5. Type letters in place of each "?".  
If you type in an incorrect letter then "No, try again" appears. If you guessed the letter correctly, continue to type letters until "You win!" appears.

6. Press [?] to reveal a letter.
7. Press [ENTER] to play another round.
8. Press [CLEAR] when finished.



## OTHER INFORMATION

---

### **VIEWING LONG WORDS AND PHRASES**

Some words and phrases are too long to fit on the screen. To see all of the phrase, Press **[ENTER]** when the word is in view. It will automatically scroll to the left.

### **ARROWS**

The flashing arrows at the right of the screen show which arrow keys you can press to view more words.

### **TOPICS**

If a flashing "T" appears to the right of a word, you can press **[TOPIC]** to view the topics associated with that word.

### **SCANNING THE WORD LIST**

You can view all of the words that are listed alphabetically in the Crosswords solver. Type in a word and press **[ENTER]**. You can then scroll up or down though the entire word list using the arrow keys.

### **BATTERY REPLACEMENT**

The battery needs to be changed when the display dims. Remove the battery cover by removing the screws with a small cross-headed screwdriver. Remove the used battery and replace with a new CR2032 3-volt lithium battery with the "+" side facing uppermost. Refit the cover taking care not to over tighten the screws.

**Caution:** There is a risk of explosion if the batteries are fitted incorrectly. Replace only with the type indicated. Do not dispose of the batteries in a fire and keep them out of the reach of children.

## **CARE OF THE CROSSWORD SOLVER**

---

The crossword solver will give its best performance if protected from extremes of temperature and kept away from moisture, dirt and dust.

Should it become soiled, clean only with a soft dry cloth. Do not use silicone polishes or cleaners containing alcohol or other solvents.

Treat the crossword solver with care. The display is made of glass and may break if the unit is dropped or twisted. Do not place in a back pocket.

Do not attempt to service the crossword solver. There are no serviceable parts inside.

## WARRANTY

---

In addition to your statutory rights, Boots The Chemists Ltd agrees that if any defect in materials or workmanship appears in the product within TWO YEARS after the original date of consumer purchase, it will repair or at its option, replace the product free of charge. This applies only if the product has been used for domestic purposes and has not been damaged through misuse, accident or neglect and has not been modified or repaired by anyone other than Boots or its authorised agents.

If a defect appears, please check that the article is being used in accordance with the instructions, if so, return it with this warranty and the Boots Certificate of Purchase or some other proof of date of purchase to your nearest store of Boots which stocks this article or similar article as soon as possible.

Please note that the battery may need replacing in less than TWO YEARS without being defective within the terms of this warranty.

THE BOOTS COMPANY PLC NOTTINGHAM ENGLAND